





SPRAYWASH

SANITATION MADE EASY


HOW TO USE SPRAYWASH

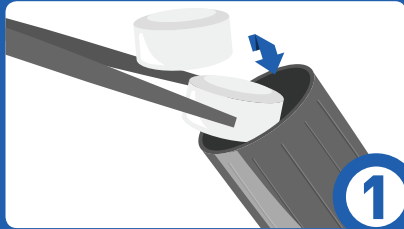


1 Place 1 or 2 tablets in the SprayWash tablet container.

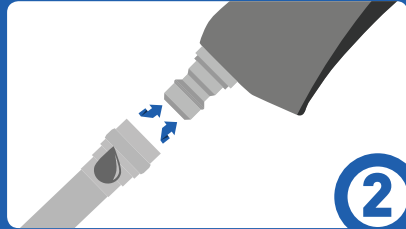

2 Connect to hose.

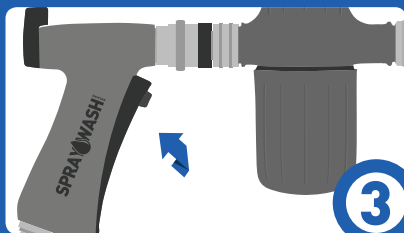


3 Pull the trigger.

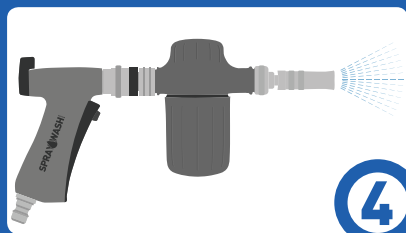

4 Spray desired surfaces thoroughly and let it work. Avoid drying out on the surface.



! If necessary; Scrub the surfaces manually.

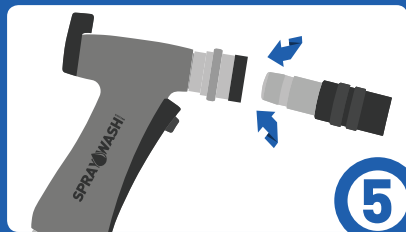

5 Rinse thoroughly with cold water.

REMEMBER

- Follow instructions for correct use
- Water pressure between 2-4,5 bar
- Use cold water
- Only use warm water if needed (30 - 40° - please note; provides higher dosage!)
- Ensure good ventilation/fresh air
- Use practical clothing
- Keep distance to surfaces you spray
- Only use original SprayWash tablets
- Keep tablets dry, cool and away from sun and heat
- Apply grease/oil on couplings periodically



Instruction video at www.spraywash.eu

IMPORTANT INFORMATION



- handling after usage!

SprayWash has to be drained after use - or by breaks of more than 10 minutes.

Empty the content into a drain/container. Rinse with clean water where you drain SprayWash. Rinse SprayWash with water. Be careful: Concentrate may discolor clothing etc.

Unscrew tablet container. Screw the lid on. If there is more tablet remaining it has to stay in the tablet container until next time you use SprayWash.

Store SprayWash, tablet container and handle in the included wall holders.

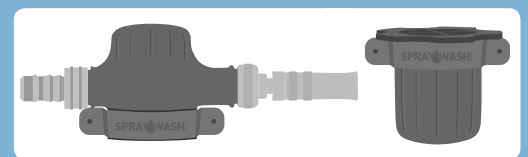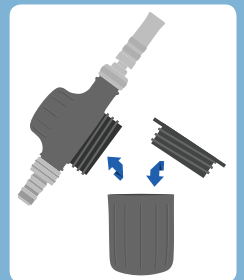

SPARE PARTS

- 65002 SprayWash System Nito
- 66005 SprayWash System Click
- 66006 SprayWash Descaler Nito
- 66007 SprayWash Descaler Click
- 66008 Tablet Kit
- 66009 Tablet Kit
- 66012 Tablet Kit
- 66013 Tablet Kit
- 66014 Tablet Kit
- 66015 Tablet Kit
- 66016 Tablet Kit
- 66018 SprayWash Handle Nito
- 66019 SprayWash Handle Click
- 66020 SprayWash Coupling
- 66021 SprayWash Nozzle
- 66022 SprayWash Spray Lance
- 66023 SprayWash O-ring for tablet container
- 66024 SprayWash Cleaning Pad

CLEANINGTAB 1
For periodic descaling. **DO NOT USE ON MARBLE.**
Leave for 1-3 minutes.
66026 CleaningTab 1
66025 CleaningTab 1 with perfume
66013 Tablet Kit

CLEANINGTAB 7
For light daily cleaning.
Leave for 1-3 minutes.
66028 CleaningTab 7
66027 CleaningTab 7 with perfume
66009 Tablet Kit

CLEANINGTAB 9
For daily and heavy cleaning.
Leave for 1-3 minutes.
66030 CleaningTab 9
66029 CleaningTab 9 with perfume
66012 Tablet Kit

CLEANINGTAB 12
For heavy cleaning.
Leave for 1-3 minutes.
66032 CleaningTab 12
66031 CleaningTab 12 with perfume
66016 Tablet Kit

DESTAB
For oxidizing disinfection and cleaning.
Reaction time: 5-10 minutes.
66035 DesTab
66015 Tablet Kit

CHLORTAB
For chlorine disinfection and cleaning.
Reaction time: 5-10 minutes.
66033 ChlorTab
66034 ChlorTab Extra
66014 Tablet Kit

SUPPORT

Contact your supplier or contact us directly for support, technical questions and spare parts.



PLS Produkter AB
Tlf: 0046 500-382080
www.pls.nu